

# PC interface for programming and configuration


10-855

4 year  
warranty

This PC interface, in combination with the Niko configuration software for access control, is used to read or configure a new or existing installation and/or modify the settings of separate devices.

Each PC interface comes with a personal activation code which is necessary to get started with the complete version of the Niko configuration software.

The drivers for PC interface can be downloaded via [www.niko.eu](http://www.niko.eu). The drivers are available for PC or laptop with Windows operating system.

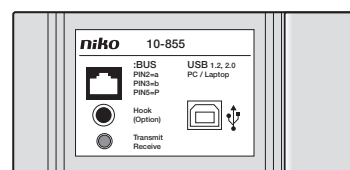

## Technical data

PC interface for programming and configuration  
for the configuration, analysis and maintenance of NACS installations

- only allowed for utilities
- for simplified programming
- consists of a service interface and various utilities
- connects a PC (laptop) to a Niko Access Control installation
- status display for operating modes and data transfer
- standard USB connection - galvanic isolation between installation and PC
- 3-wire technique required - input current:  $I(a) = 0.6\text{mA}$ ,  $I(P) = 11\text{mA}$  in quiescent state
- maximum input current:  $I(P_{\text{max}}) = 14\text{mA}$  - permissible ambient temperature: 0 to 40°C
- dimensions: H 20 x W 95 x D 42mm

System requirements: up-to-date PC, 10MB free hard disk space, CD drive, SVGA graphics card (resolution 800 x 600) and min. 256 colours, operating system WIN 98 SE / 2000 / XP

This set contains

- 1 x service interface with USB connection
- 1 x adapter plate
- 1 x receiver for speech connection with connection cables
- Weight: 46 g
- Dimensions (HxWxD): 42 x 95 x 20 mm
- Marking: CE

