

Double push button for Niko Home Control, piano black coated

200-51036

4 year
warranty

This push button allows you to control two groups of roll-down shutters, curtains or sunblinds. It is attached to the wall-mounted printed circuit board via a click mechanism. Switch including button. Finishing colour: piano black coated.

Technical data

Double push button for Niko Home Control, piano black coated.

- Material central plate: The central plate is enamelled and made of rigid PC and ASA.
- Print: Arrows printed on the top and bottom keys show whether you are raising or lowering the roller shutter or blind. On the middle key(s) a shutter is printed including the favourite button. If you press this key the shutter, sunblinds or blind will go straight to the set position.
- Colour: enamelled Bakelite®-look piano black (approximately NCS S 9000 N, RAL 9005). Bakelite® is a registered trademark of Hexion GmbH
- Fire safety
 - the plastic parts of the central plate are self-extinguishing (comply with a filament test of 650 °C)
 - the plastic parts of the central plate are halogen-free
- Input voltage: 26 Vdc (SELV, safety extra-low voltage)
- Dismantling: To dismount simply pull the central plate off the base.
- Impact resistance: After mounting, an impact-resistance of IK06 is guaranteed.
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE

