Programming adapter, KNX®

This programming adapter allows you to provide the KNX® wireless and battery-free dimmer switch (360-31001) with energy during commissioning. Connect the programming adapter to the KNX® dimmer switch and configure the functions of the buttons using the ETS software that is available on the KNX® Association website. The adapter requires two AAA batteries (not included).






360-39001

Programming adapter, KNX®





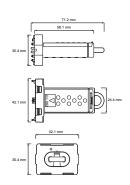



This programming adapter allows you to provide the KNX \otimes wireless and battery-free dimmer switch (360-31001) with energy during commissioning. Connect the programming adapter to the KNX \otimes dimmer switch and configure the functions of the buttons using the ETS software that is available on the KNX \otimes Association website. The adapter requires two AAA batteries (not included).

- battery type: AAAbattery voltage: 1,5 V
- operating temperature -20 °C . +45 °C
- protection degree: IP20



