

Fourfold push button for Niko Home Control, cream

100-51004

4 year
warranty

This push button allows you to perform four operations. It is attached to the wall-mounted printed circuit board via a click mechanism. Switch including button. Finishing colour: cream.

Technical data

Fourfold push button for Niko Home Control, cream.

- Material central plate: The central plate is made of rigid PC and ASA. The base material is coloured in mass.
- Colour: cream (coloured in mass, approximately NCS S 1005 - Y10R, RAL 1013)
- Fire safety
 - the plastic parts of the central plate are self-extinguishing (comply with a filament test of 650 °C)
 - the plastic parts of the central plate are halogen-free
- Input voltage: 26 Vdc (SELV, safety extra-low voltage)
- Dismantling: To dismount simply pull the push button off the wall-mounted printed circuit board.
- Impact resistance: After mounting, an impact-resistance of IK06 is guaranteed.
- Dimensions (HxWxD): 44.5 x 44.5 x 8.6 mm
- Marking: CE

