


PC-gränssnitt för programmering och konfiguration

PC-gränssnittet i kombination med Nikos konfigurationsprogram för åtkomstkontroll kan användas för att läsa av eller konfigurera en ny eller befintlig installation och/eller ändra inställningarna för separata enheter. Gränssnittet är anslutet till bussen via ett mellanliggande kretskort. Anslutningen till datorn görs via USB.

Drivrutinerna för PC-gränssnittet kan laddas ned från www.niko.eu. Drivrutiner är tillgängliga för datorer med operativsystemet Windows.

- PC-konfiguration som krävs: lägst Windows 98SE
- USB-anslutning: USB 1.1 eller USB 2.0


Kontakta Niko för mer information och projektstöd.

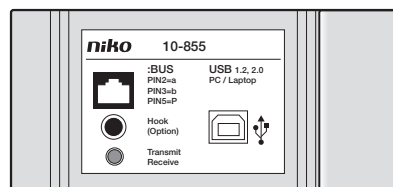

10-855

4 year
warranty

Niko Access Control - PC interface for programming and configuration

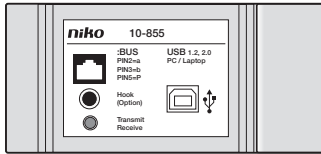

This PC interface, in combination with the Niko configuration software for access control, is used to read or configure a new or existing installation and/or modify the settings of separate devices.

Each PC interface comes with a personal activation code which is necessary to get started with the complete version of the Niko configuration software.

The drivers for PC interface can be downloaded via www.niko.eu. The drivers are available for PC or laptop with Windows operating system.

